F-31 & F-31LE BOWFISHING COMPOUND BOW MANUAL



PRODUCT GUIDE

Bow Specs

- Draw Length: 31"
- Brace Height: 8 3/16"
- Axle to Axle: 30"
- Cam to Cam: 34"
- Poundage (max 7 turns):
 F-3125-40 lbs.
 F-31LE15-29 lbs.
- String Length: 57.5625"
- Cable Length: 31.5625"
- Bow weighs: 4 lbs.
- Center Shot: 13/16"

SETTING UP YOUR F-31

- Unbox the Fin-Finder F-31 and accessories, inspect the items to ensure there was no damage during shipping.
- 2. Mount all accessories in accordance with the manufacturer's instructions. (locations on page 2)
- 3. Establish the nocking point once rest installation is complete and adjust the finger savers' height as needed. (FF Tip: add a brass nock or served nocking point above the arrow nock and below the top finger saver).
- 4. The F-31 is a continuous draw cam system out to 31". Draw the bow with an approved bowshing arrow in a safe direction until a comfortable anchor is reached and then slowly let the string down without releasing the arrow. If the draw weight is too heavy (Out of the box: F-31 40 lbs., F-31LE 29 lbs.) turn the limb bolts counterclockwise until a comfortable weight is reached, ensuring a maximum of 7 turns is not exceeded. Check the thread window to see if the limb bolt is still slightly exposed. If not slightly exposed, do not draw the bow back until the limb bolt is adjusted to be slightly exposed in the thread window.



31"
Draw Length






PRODUCT GUIDE

Bow Components

- A Zero let-off cams with deep-well grooves keep the string from derailing
- B High-quality Gordon Glass limbs
- Anti-slip grip
- Finger Savers included
- E Adjustable limbs F-3125-40 lbs. F-31LE15-29 lbs. (7 turns max out on bow)

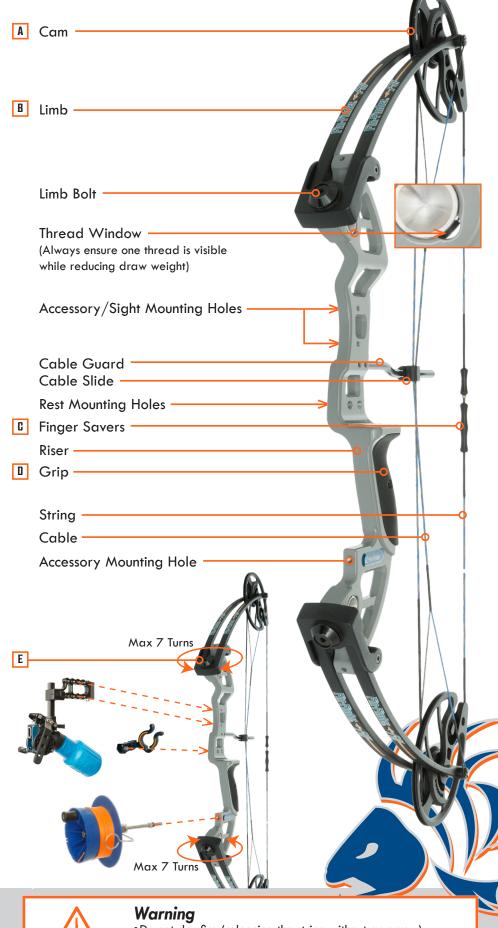



- Do not dry fire (releasing the string without an arrow).
- Do not exceed 7 counterclockwise turns on the limb bolts.
- Do not use a single pull bow press for disassembly.